



# BR1 Pro 5G


## Hardware Reference Guide

# BR1 Pro 5G (HW2)



## Packing List Information

### Router

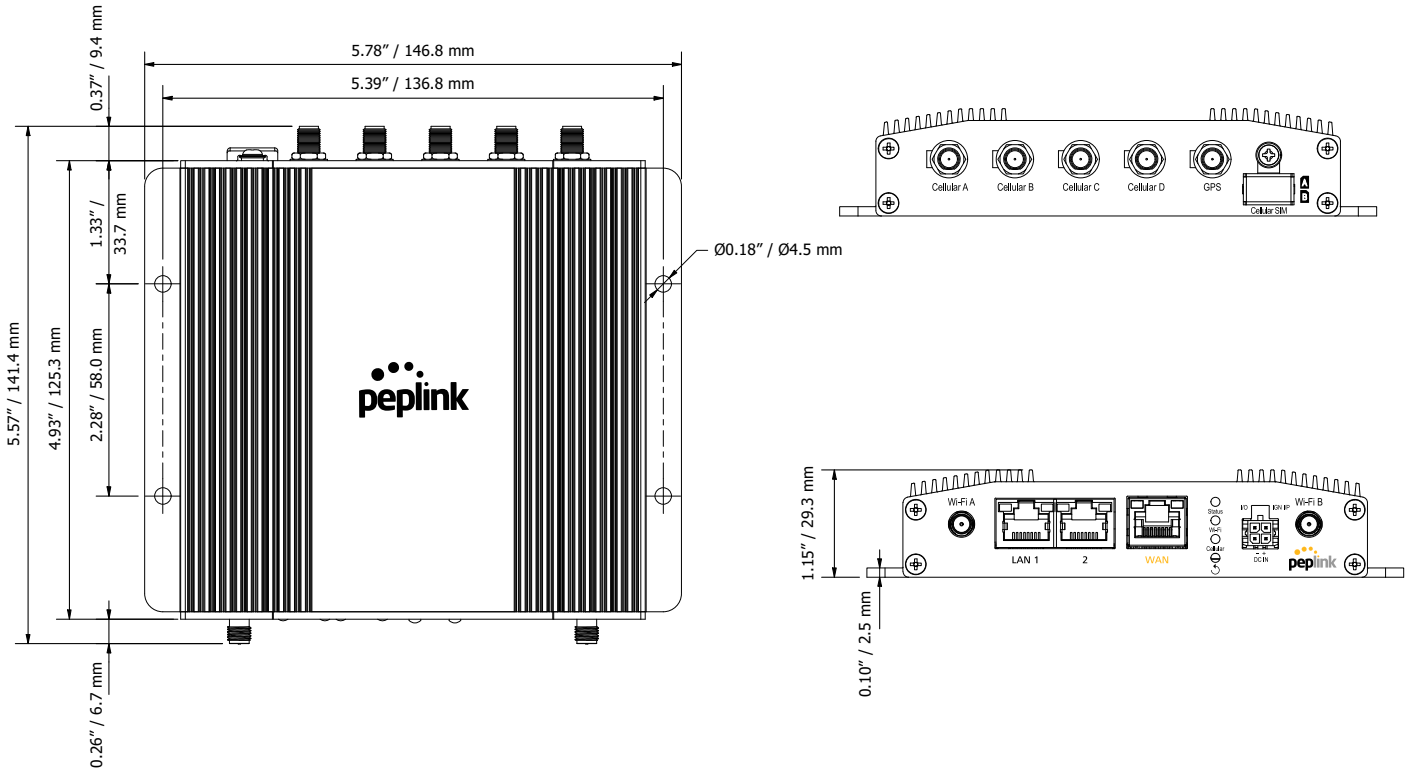


### Accessories





LTE/5G Antennas  
(4 pcs, SMA Male)




Wi-Fi Dual Band Antennas  
(2 pcs, RP-SMA Male)

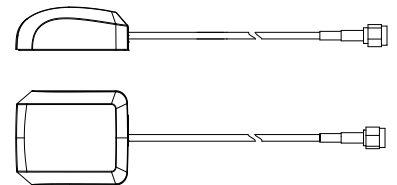

GPS Active Antenna  
(1 pc, SMA Male)

 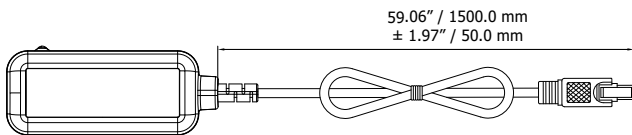

12V 2A 4 Pin Power Supply  
(1 pc)

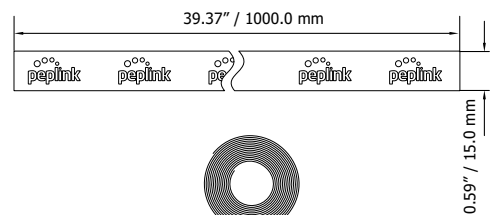

Cable Wrap  
(1 pc)


<sup>1</sup> The power supply plug will be different based on the delivery address.

# BR1 Pro 5G (HW3)



## Packing List Information

### Router

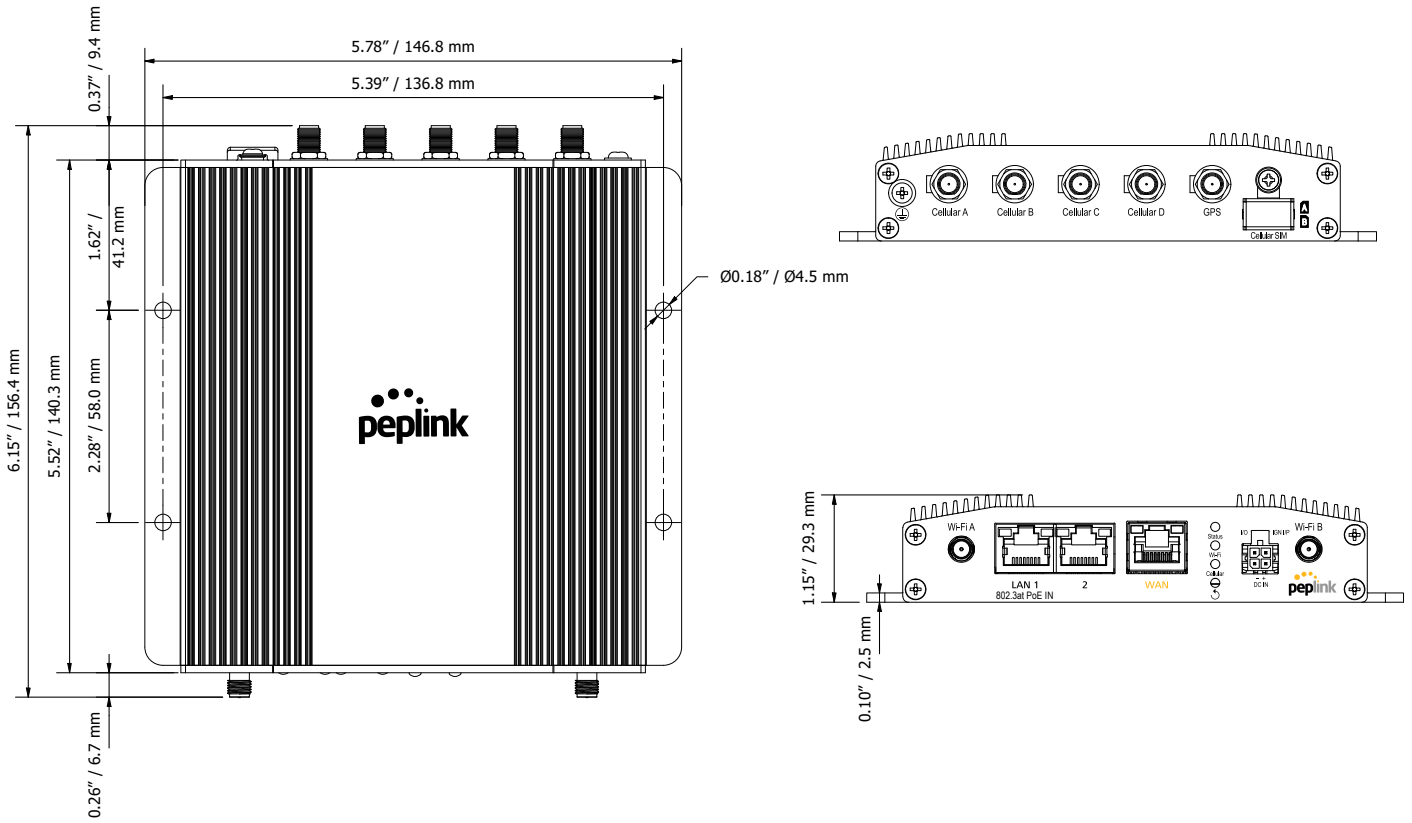


### Accessories




LTE/5G Antennas  
(4 pcs, SMA Male)




Wi-Fi Dual Band Antennas  
(2 pcs, RP-SMA Male)

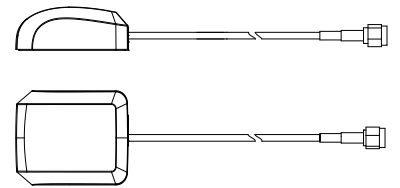


GPS Active Antenna  
(1 pc, SMA Male)

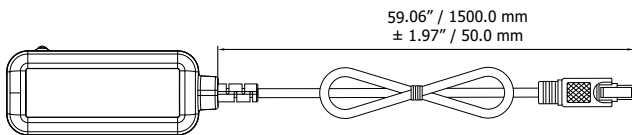


12V 2A 4 Pin Power Supply  
(1 pc)

 
 
<sup>1</sup> The power supply plug will be different based on the delivery address.



Cable Wrap  
(1 pc)

 


# BR1 Pro 5G




## Connection Pin-Out

BR1 Pro 5G (HW2)

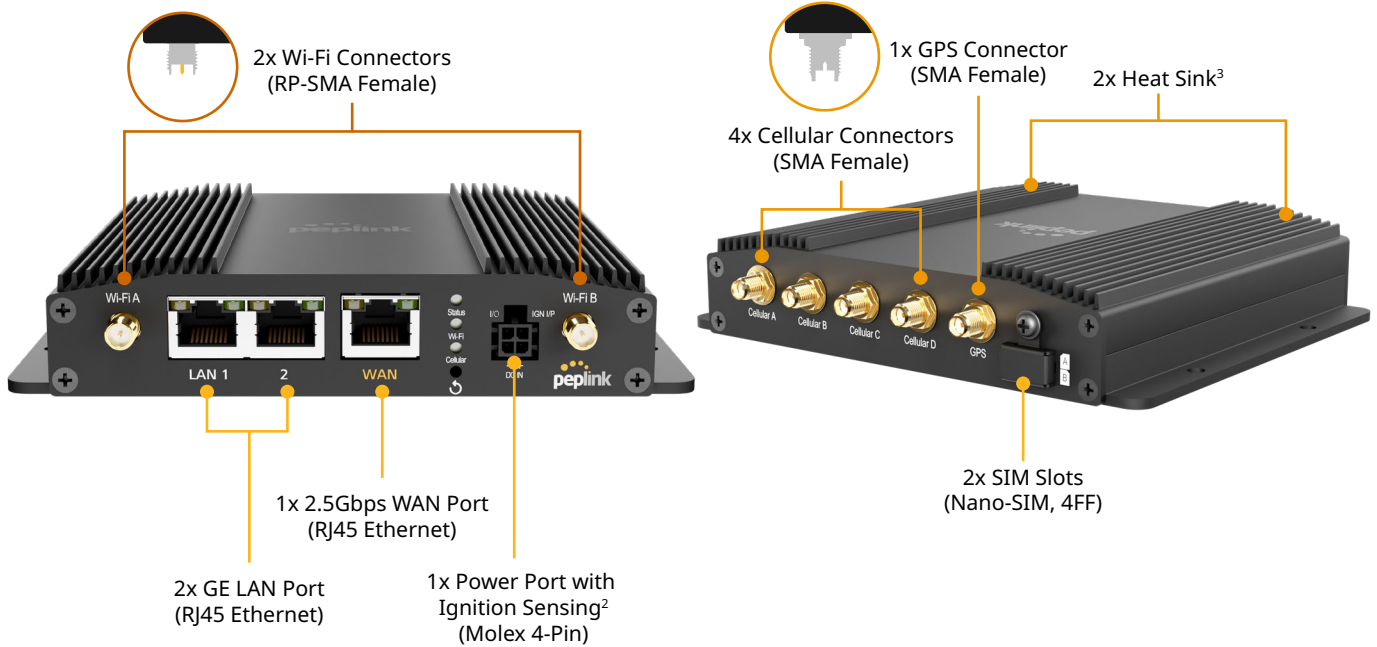

BR1 Pro 5G (HW3)

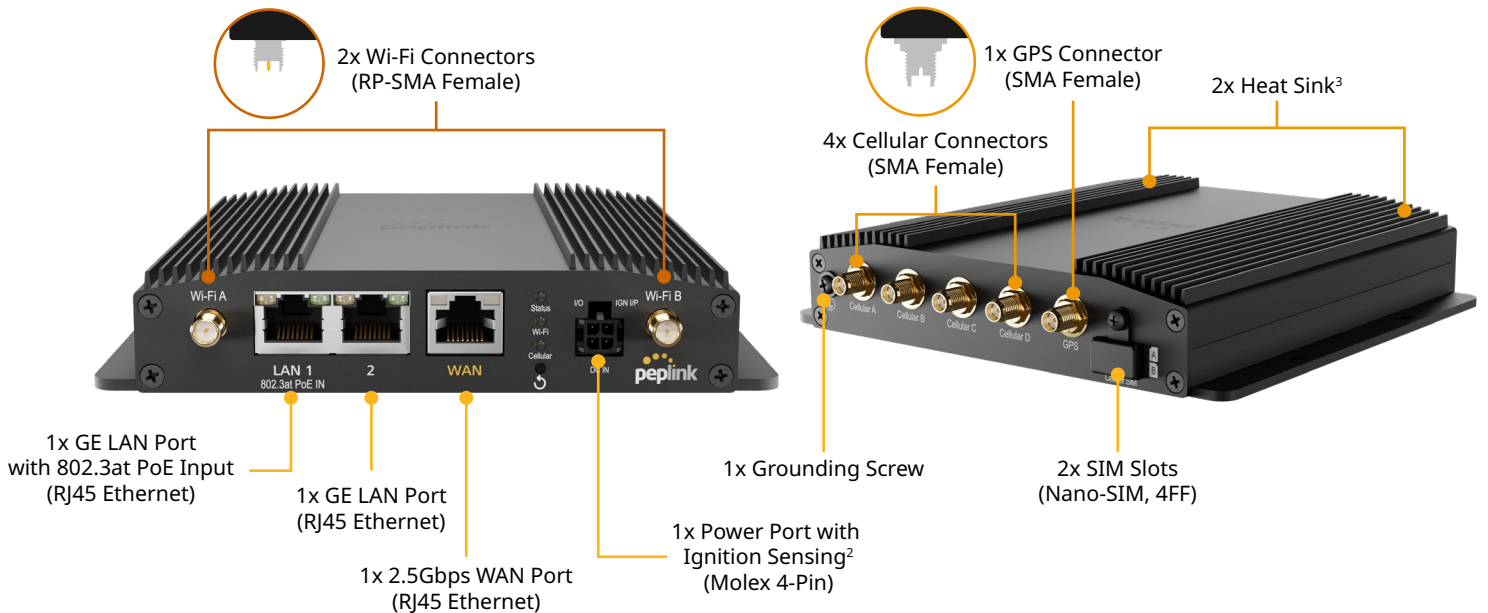

<sup>2</sup> Click [here](#) to explore GPIO and Ignition Sensing features.

<sup>3</sup> For better heat dissipation, please avoid covering the heat radiation fins on the devices's top.